


**ADA-100 MASTER TROUBLE LIGHT DIRECTIONS**  
used for Extinguishing the Amber Trouble LED

Place the shunt supplied in the hardware bag on the JMP header that is not being used for an area station connection in the system.

EXAMPLE (a 3 unit system needs the shunts installed on JMP2 & JMP1 for the trouble lights to go out on the master station at zones 4 & 5)

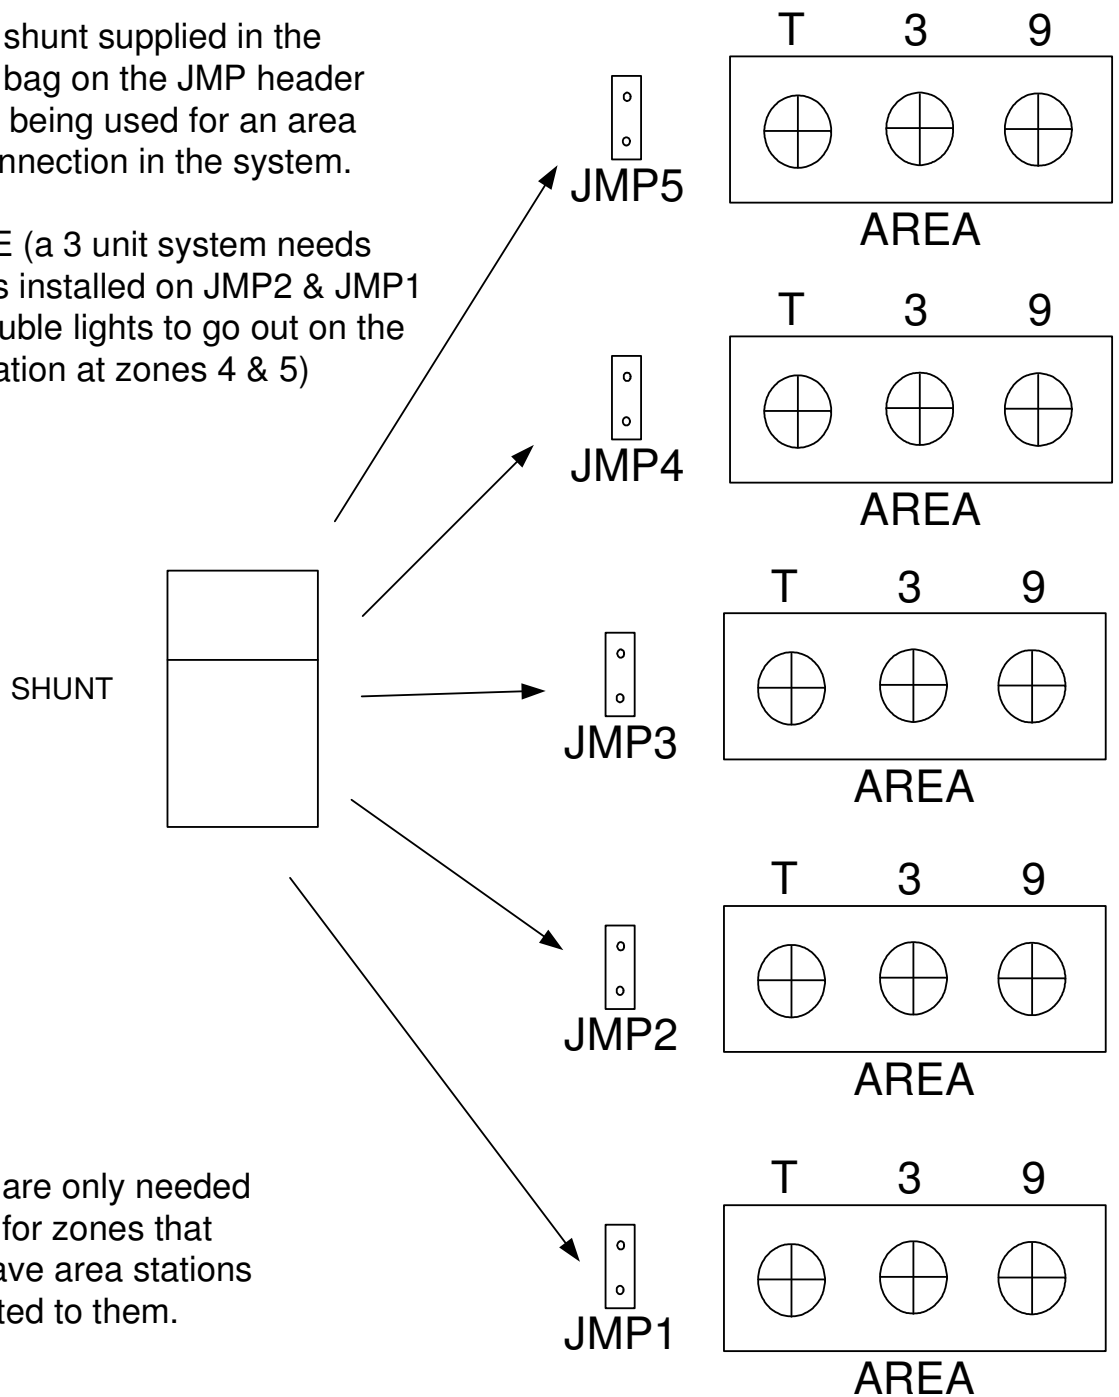

**NOTE**

Shunts are only needed & used for zones that don't have area stations connected to them.