

1. Cautions

Please pay attention to the following items. Mis-operation may lead to equipment failure or personal injury.

- 1) Do not power on the system before the installation is complete. Do not install or repair while power is on.
- 2) All external devices must be grounded.
- 3) It is recommended that all wires run through PVC or galvanized conduit.
- 4) We recommend that the exposed part of all wires be shorter than 4 mm to avoid short circuiting or communication failure.
- 5) It is recommended that the card reader and the exit button should be installed at height of about 1.4-1.5m.
- 6) It is recommended to use separated power supplies for the control panel and the lock.

Description of normal working state:

Power on the system, the power indicator (red) is on constantly in normal working state, the run indicator (green) is flashing, the communication indicator (yellow) is flashing when communicating.

2. Components

Panel Box Appearance

Panel Box Inside

3. Installation

After the following installation, fix the panel on the track first, and then install other components.

4. LED Indicators and Wire Illustration

1) Meaning of LED indicators:

LINK indicator (green): Constant light indicates TCP/IP communication is normal.

ACT indicator (yellow): Flashing indicates data is transmitting through TCP/IP communication.

EXT RS485 indicator (yellow & green): Flashing indicates it is sending or receiving data through RS485 communication.

PC RS485 indicator (yellow & green): Flashing indicates it is sending or receiving data through RS485 communication.

POWER indicator (red): Steady light indicates the control panel power is on.

CARD indicator (yellow): Flashing indicates card is punched on reader.

2) Recommended use of wires :

A. Use 2-conductor power cord.

B. Use 6-conductor wire between Wiegand reader and control panel (RVVP 6*0.5mm) (choose the appropriate cord for the interface you connect, such as 6, 8, 10 cord)

C. Use 4-conductor lock power cord (RVV 4*0.75mm)

D. Use 2-conductor switch power cord (RVV 2*0.5mm)

E. Use 4-conductor wire (RVVP 4*0.5mm)

3) The Auxiliary Input may be connected to infrared body detectors, alarms, switches, etc.

4) The Auxiliary Output may be connected to door bells, alarms, etc.

5) State Indicator is connected to the panel box which is power indicator, run status indicator and communication status indicator.

Diagram on Panel 3

Ethernet Interface	Auxiliary Output 4
DIP Switch	Control Panel Power
PC RS485 Interface	#1 Door Wiegand In Reader B
Auxiliary Output 1	#1 Door Wiegand Out Reader B
Auxiliary Output 2	#2 Door Wiegand In Reader B
Auxiliary Output 3	#2 Door Wiegand Out Reader B

5. DIP Switch Settings

1) Switches 1-6 are used to set the control panel number in RS485 communication: It is adopted binary coding and little endian; the address number is set by placing these 6 switches as shown in the figure below. Before setting the address, please keep the system powered off. Place the corresponding switches to the desired status. The address number should not be repeated in the network.

For example: Set the device number as 39 ($39=1+2+4+32$), the switch's status is 111001, that is set number 1, 2, 3 and 6 switches at "ON".

2) Number 7 switch is used to restore the factory defaults: Switch it for three times within 10 seconds and restart the device, then all data will be cleared and the system restored to factory default settings.

3) Number 8 switch is used to set terminal resistance in RS485 communication: Switch it to "ON" status, which adds a terminal resistance of 120 ohm between 485+ and 485-.

6. Lock Connection

1) The control panel provides lock control output interfaces. For NO lock, it is normal open when power is on, so COM and NO terminals should be used. For NC lock, it is normal closed when power is on, so COM and NC terminals should be used.

2) The control panel supports "dry mode" and "wet mode" by using the jumper. For "wet mode", short terminals 2-3 and 4-5. The control panel and the lock use separate power supplies: One is connected with +12V and GND of POWER interface (for the control panel), the other is connected with V+ and V- of LOCK interface (for the lock). For detailed settings for "dry mode" and "wet mode", please refer to the Installation Guide. The factory default is dry mode.

3) For the Wiegand reader and the inBIO reader, the standard power supply is 12V/3A. So we do not recommend that the lock and the control panel share common power supply. If it is necessary to do so, we suggest using a larger one, such as 12V/5A. Not including the power reserve, there are 2A current for the lock. For the common electrical lock (the standby current is 300mA, the maximum current is 500mA), the maximum connected locks is 4.

4) When the electrical lock is connected to the access control system, you need to parallel an Fr107 diode (included in the package) to prevent the self-induced EMF from affecting the system. Do not reverse the polarities.

Diagram on Panel 5

Insert a screw driver to the rectangular hole in the four corners of the panel back. Push it in until hearing the "click" sound then remove the case from the panel.

The following is "wet mode" lock connection with external power supply.

7. 485 Reader (inBIO Reader) Connection

The control panel supports inBIO biometric verification reader and Wiegand reader. All inBIO reader, operations are executed from the control panel

including storage, verification, etc. Re-registering fingerprints is not required when replacing reader.

Make the biometric reader connection.

inBIO reader connection: First of all, set the 485 address (device number) of the reader by software, DIP switch or keypad.

Readers 1 and 2 (the odd number is for the entry reader and the even number is for the exit reader) are for door number 1. And the 485 address is 1, 2, etc. as in the figure below. For more information, please refer to the software user manual.

In the inBIO reader connection, a single EXT485 interface can supply 500mA (12V) maximum. So the entire current consumption should be less than this max value when the reader shares power with the panel.

For example, when you use the F11 reader (the standby current is less than 100mA, the max current is less than 120mA)

for the inBIO reader connection, the max number is 4 readers. For this type of panel, 2 readers can be connected at most. For

some of the devices with much greater consumption, we suggest using the separate power supplies, to ensure the steady operation.

8. Equipment Communication

The PC software can communicate with the panel according to the communication protocols (RS485 and TCP/IP) for data exchange and remote management. The communication cable should be as far away from high-voltage lines as possible. Do not keep the communication cable parallel to power cords or bind them together.

1. TCP/IP Communication
 - #1 Control Panel
 - #2 Control Panel
 - #8 Control Panel
2. RS485 Communication
 - #1 Control Panel
 - #2 Control Panel
 - #8 Control Panel

1) Internationally accepted RVVP (shielded twisted-pair) wires should be used for communication to effectively avoid interference. RS485 communication wires should be connected by means of bus cascade connection.

2) It is recommended that the RS485 bus should be less than 600 meters to help aid communication stability.

3) One RS485 bus may hold 63 control panels, but it is not recommended to connect with less than 32 access control panels.

In inBIO reader connection, a single EXT485 interface can supply 500 mA (12V) current at most. So the entire current consumption should be less than this max value when the reader shares power with the panel.

For example, when you use the F11 reader (the standby current is less than 100mA, the max current is less than 120mA)

for inBIO reader connection, the max number is 4 readers. For some of the devices with much bigger consumption,

we suggest to use the separately power supply, to make sure the steady operation.

4) For the inBIO reader connection, if the reader and the control panel use the same power, it is recommended that the wire be less than 100 meters. If greater length is required, please use a separate power supply.

5) To enhance the stability of communication when the wire is longer than 300 meters, it is necessary to keep the number 8 switch of the first and last control panel at "ON" status. This adds the RS485 terminal resistance (120 ohm) of the two devices to the system. As shown in the figure

above, turn number 8 of the DIP switches of

the #1 and #8 at "ON" status.